Compact Pram

For use on single stroller

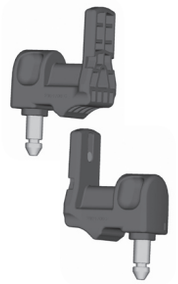

Single Attachment Brackets

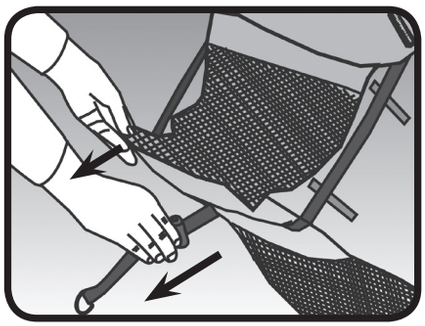

1 Fully recline stroller seat.

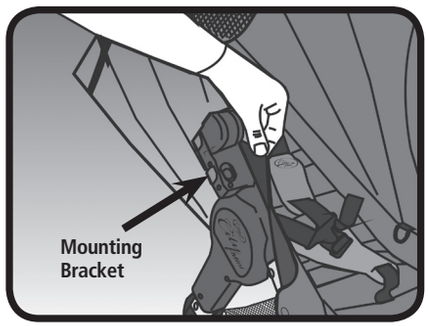

2 Pull elastic seat fabric away from stroller mounting bracket.

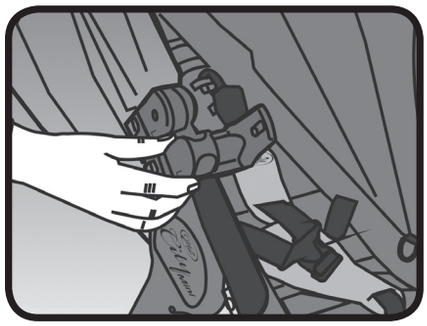

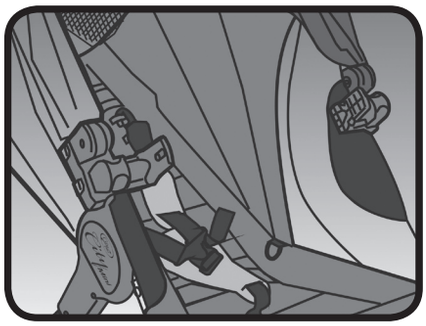

3 Insert left and right Compact Pram attachment brackets into corresponding stroller mounting bracket until they click into place. **NOTE: Left and right is determined by standing in front of and facing the stroller.**

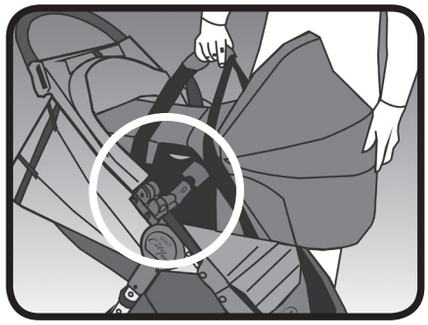

4 Holding the Compact Pram handles, align attachment brackets with Compact Pram mounting brackets.

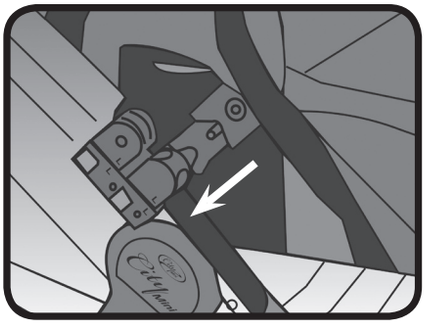

5 Slide Compact Pram onto attachment brackets until it clicks into place.

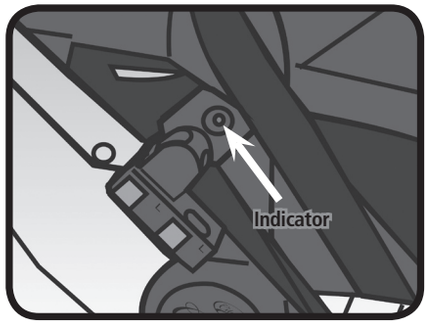

NOTE: The Compact Pram is correctly attached if green is the only color showing through the indicator.

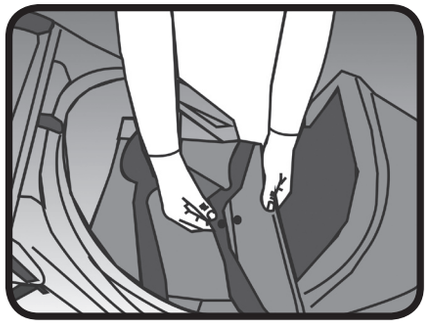

6 After the Compact Pram is attached to the stroller, fasten handle snap to snap on foot cover.

To remove the Compact Pram from the stroller:

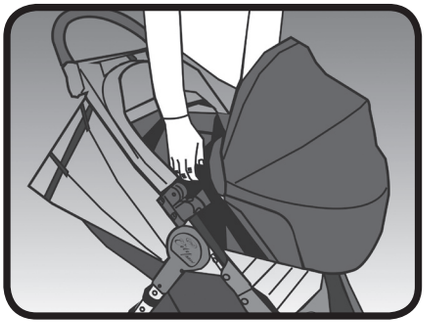

Pull release triggers located under both plastic side handles on the Compact Pram and lift off of attachment brackets.

⚠ WARNING:

To ensure a secure lock, make sure nothing is caught between the Compact Pram attachment brackets and the stroller mounting brackets, including blankets, seat liners, stroller fabric, etc.

8575 Magellan Parkway
Suite 1000
Richmond, VA 23227

T: 800-241-1848
F: 804-262-6277

www.babyjogger.com

Compact Pram

For use on City Mini double stroller:

Choose which side of the stroller you wish to place the Compact Pram on and remove stroller canopy following steps 1 & 2. If using two Compact Prams, repeat instructions for both seats.

Uses:

One Compact Pram

Two Compact Prams

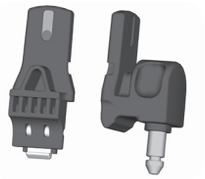

Center Outside

Double Attachment Brackets

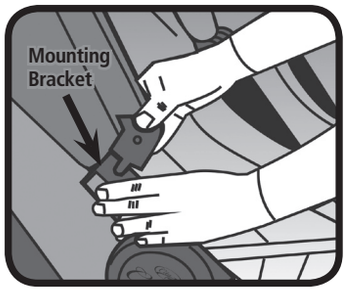

1 To remove canopy: Press gray button on mounting bracket while gently pulling canopy bracket out.

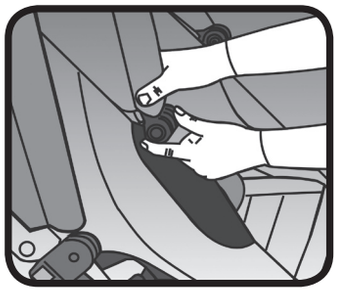

2 Press gray button on center canopy mounting bracket while gently pulling canopy bracket out. Unfasten all Velcro on the back of the canopy to fully remove from stroller frame.

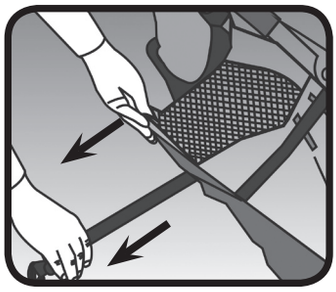

3 Fully recline stroller seat.

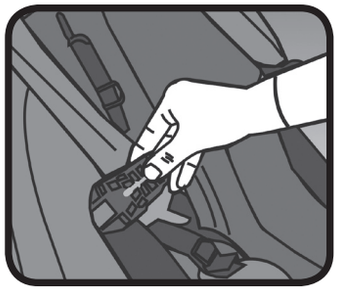

4 Insert **center** Compact Pram attachment bracket into the center mounting bracket on the stroller.

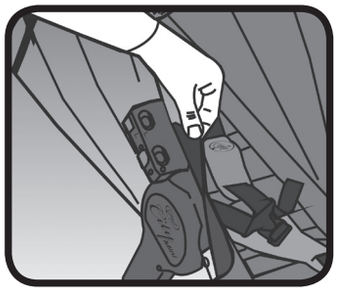

5 Pull elastic seat fabric away from outside stroller mounting bracket.

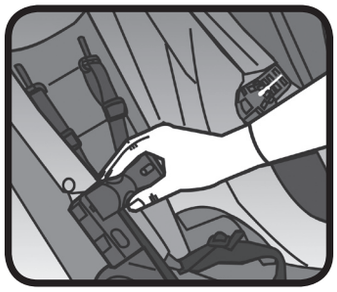

6 Insert outside Compact Pram attachment bracket into outside stroller mounting bracket.

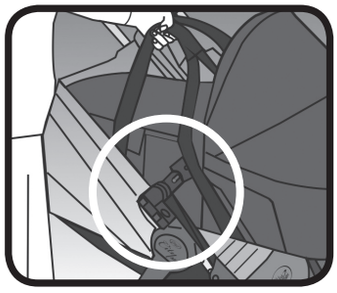

6 Holding the Compact Pram handles, align attachment brackets with Compact Pram mounting brackets.

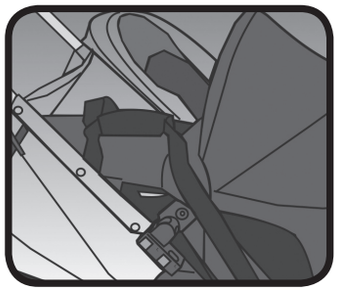

7 Slide Compact Pram onto attachment brackets until it clicks into place.

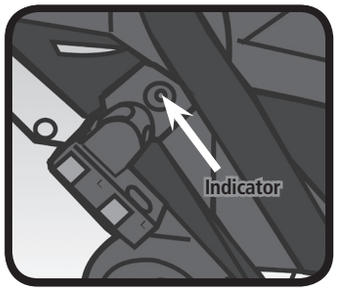

NOTE: The Compact Pram is correctly attached if green is the only color showing through the indicator.

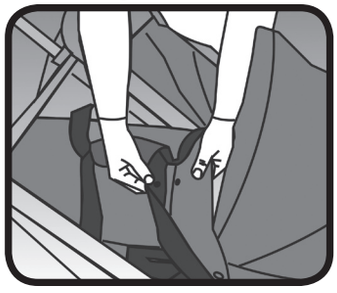

8 After the Compact Pram is attached to the stroller, fasten handle snap to snap on foot cover.
NOTE: Repeat these steps if placing two Compact Prams on your City Mini double.

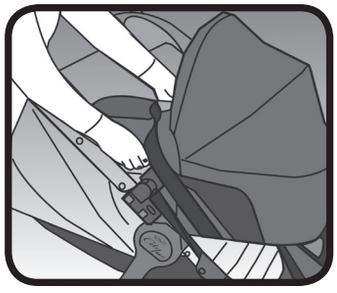

To remove the Compact Pram from the stroller:

Pull release triggers located under both plastic side handles on the Compact Pram and lift off of attachment brackets.

WARNING: To ensure a secure lock, make sure nothing is caught between the Compact Pram attachment brackets and the mounting brackets, including blankets, seat liners, stroller fabric, etc.